

Caps - Bouchons - Tapones - Tampões


UP. 07. SF

- Cap
- Female solvent socket
- Metric series

- Bouchon
- Femelle à coller
- Série métrique

- Tapón
- Encolar hembra
- Serie métrica

- Tampão
- Colar fêmea
- Série métrica

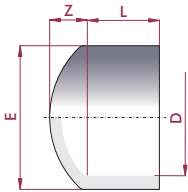

D	CODE	REF.	DN	PN	L	Z	E
16	01942	05 07 016	10	16	14	7	22
20	01943	05 07 020 ²	15	16	16	8	25
25	01944	05 07 025 ²	20	16	19	9	32
32	01945	05 07 032 ²	25	16	22	10	40
40	01946	05 07 040 ²	32	16	26	12	50
50	01947	05 07 050 ²	40	16	31	15	63
63	01948	05 07 063 ²	50	16	38	17	75
75	01949	05 07 075 ²	65	16	44	19	90
90	01950	05 07 090 ²	80	16	51	23	110
110	01951	05 07 110	100	16	61	28	131
125	01952	05 07 125	110	16	69	32	148
140	01953	05 07 140	125	16	76	36	167
160	01954	05 07 160	150	10	86	40	185
200	01955	05 07 200	175	10	106	46	224
225	01956	05 07 225	200	10	119	50	252
250	15776	05 07 250	225	10	131	60	282
315	15777	05 07 315	300	10	164	70	357


UP. 07. FT

- Cap
- BSP female thread

- Bouchon
- Femelle à visser BSP

- Tapón
- Roscar hembra BSP

- Tampão
- Roscar fêmea BSP

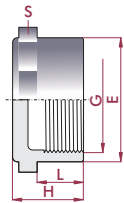

G	CODE	REF.	DN	PN	L	E	H	S
3/8"	01957	05 07 616	10	10	14	24	20	24
1/2"	01958	05 07 620	15	10	16	27	23	27
3/4"	01959	05 07 625	20	10	19	33	28	33
1"	01960	05 07 632	25	10	22	41	33	41
1 1/4"	01961	05 07 640	32	10	26	50	36	50
1 1/2"	01962	05 07 650	40	10	31	61	43	61
2"	01963	05 07 663	50	10	38	75	50	75
2 1/2"	01964	05 07 675	65	10	44	90	64	90
3"	01965	05 07 690	80	10	51	108	76	108
4"	01966	05 07 710	100	10	61	135	91	135


UP. 19. MT

- Plug
- BSP male thread

- Bouchon
- Mâle à visser BSP

- Tapón
- Roscar macho BSP

- Tampão
- Roscar macho BSP

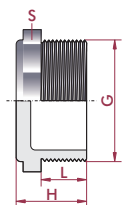

G	CODE	REF.	DN	PN	L	H	S
1/4"	02121	05 19 612	8	10	10	18	12
3/8"	02122	05 19 616	10	10	10	22	20
1/2"	02123	05 19 620	15	10	14	27	27
3/4"	02124	05 19 625	20	10	16	30	32
1"	02125	05 19 632	25	10	19	34	36
1 1/4"	02126	05 19 640	32	10	21	36	46
1 1/2"	02127	05 19 650	40	10	21	37	55
2"	02128	05 19 663	50	10	26	42	65
2 1/2"	02129	05 19 675	65	10	30	50	80
3"	02130	05 19 690	80	10	33	59	93
4"	02131	05 19 710	100	10	38	68	115